



Pynamite Nozzle Cleaning Instructions

Every Pynamite nozzle has PYNAMITE stamped into the nozzle tip.



Pynamite Nozzles are fully cleanable. The tip (1) can be unscrewed and soaked in a vinegar/warm water solution to remove calcium deposits. Note they are machine tightened from the factory, you may need to use pliers to separate.

The Nozzle also contains a cleanable mesh filter (2) in the rear of the Nozzle. Unscrew the back of the Nozzle to locate the filter, remove and rinse the filter with fresh water to remove any debris. Hand tighten to reassemble.

Take care not to lose the ball and spring (3), as these are necessary to keep the nozzles from dripping.

